


This document shall be considered PVP Communications, Inc. proprietary information and not be disclosed to any third party without the prior written consent of PVP Communications, Inc.

TJ-105

Headset Jack

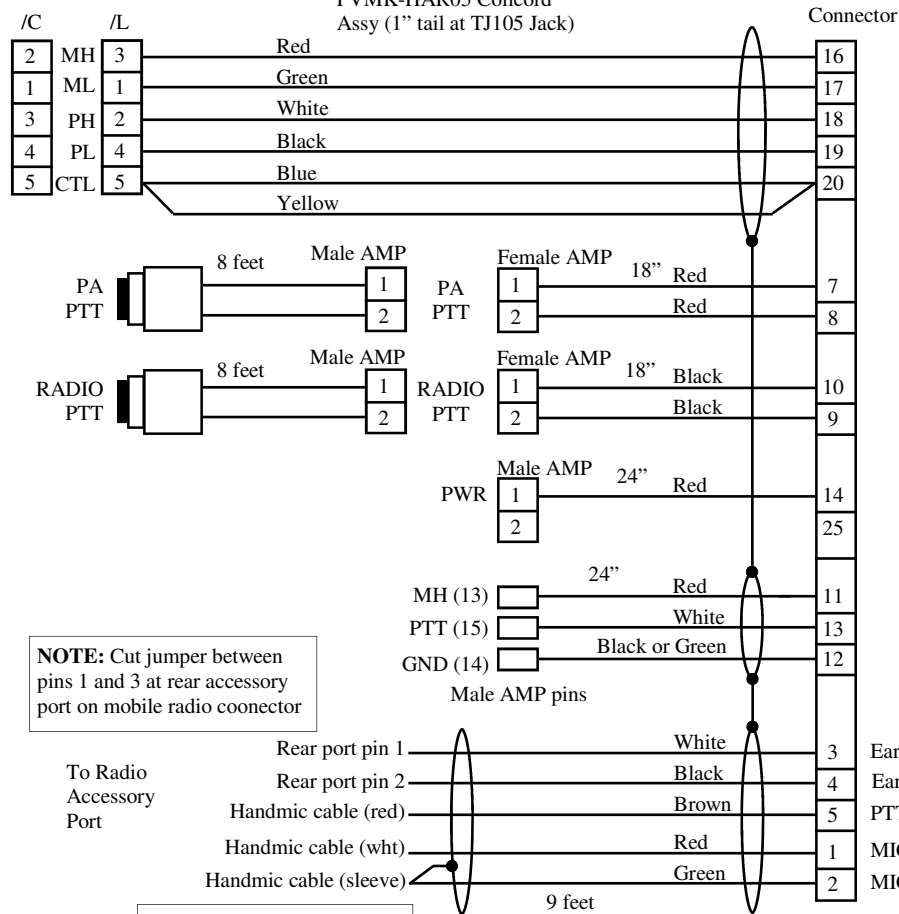

NOTE: Cut jumper between pins 1 and 3 at rear accessory port on mobile radio connector

To Radio Accessory Port

NOTE: Remove handmic, disconnect wiring in housing and connect to motor kit as follows:

| Date | Authorized | Description | Rev |
|------------|------------|-----------------------------------|-----|
| 07/22/2002 | MD | Release | NC |
| 02-06-03 | MD | Delete cable to chassis | A |
| 01-15-04 | MD | Add R & C to PA input signal | B |
| 6-28-08 | MD | Remove R and C from PA for RT1200 | C |

NOTE:

Kit includes: Harness Assy PVSMT-AP-C3-H01
Module Assy PVPCB-BMW01 (not shown)

NOTE:

- Grind out holes in box and lid
- Cover shields in DB25 connector

PART NUMBER:

PVSMT- AP-C3

| CODE | DESCRIPTION |
|------|-------------------|
| B | BMW PTT (no Brkt) |
| H | Harley PTT |
| K | Kawasaki PTT |
| G | Generic PTT |

| CODE | DESCRIPTION |
|------|-----------------|
| /L | Military Wiring |
| /C | Nonstd Wiring |

PVP Communications, Inc

| | |
|------------------|---|
| Eng | Title: Motor Kit, BMW, SUMMIT Mobile with CODE3 Siren, Autoswitching, "P" Configuration |
| Check | |
| Date: 07/22/2002 | |
| Sheet 1 of 1 | Drawing No: PVSMT-AP-C3 |